




**IMPORTANT NOTES:**

Non compliance with this wiring diagram will impair Autoline operation and will negate the manufacturer's warranty.

Except when testing the unit the battery must remain disconnected during installation.

If the wires connecting the Autoline to the Speed Sensor need to be extended ensure that the SPEED SIGNAL wire is shielded. Extension cables are available from RMSD Ltd.

+SPEED should not be connected to the speed sensor if the speed sensor is already powered from an external supply.

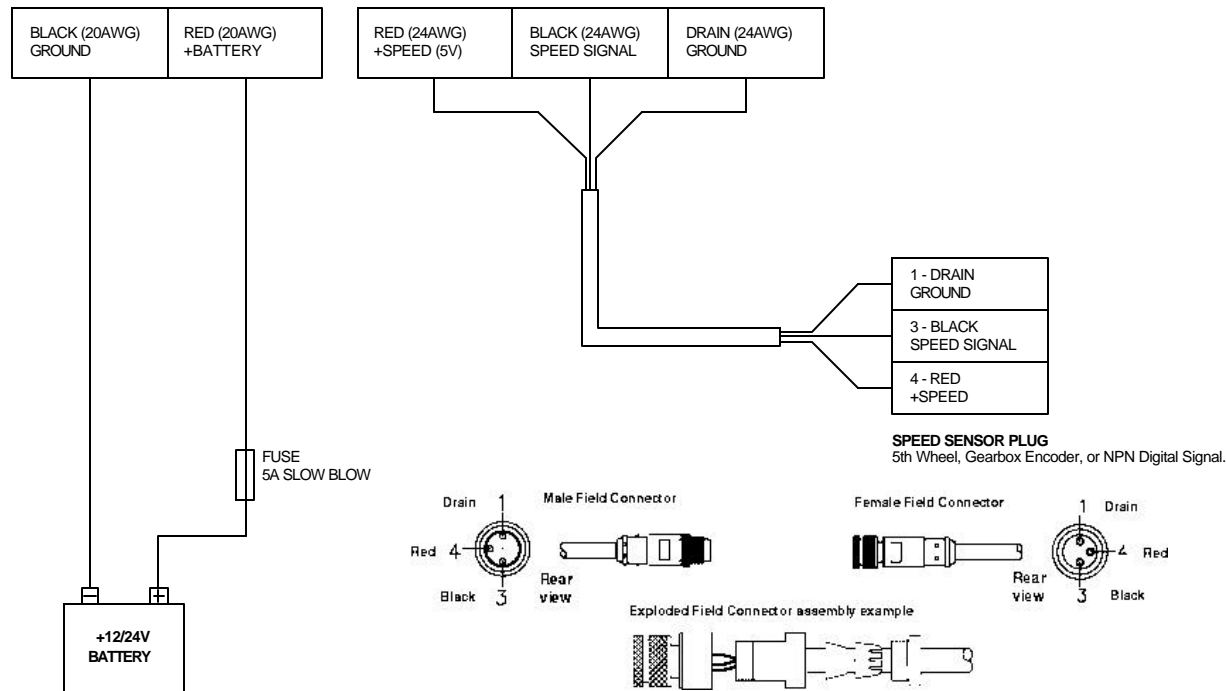

<b>RMSD LTD</b>	<b>10/09/09</b>
<b>AUTOLINE V2 WIRING DIAGRAM</b>	
<b>AUTOLINE SPEED</b>	